



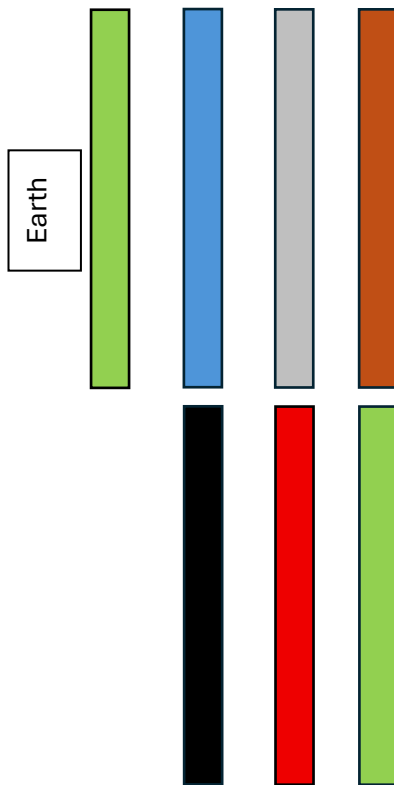

Option A

With the unit switched off and isolated from the power supply, swap the following cables from the old-style ball valve to the new ball valve: swap the blue cable with the black cable, the grey cable with the red cable, and the brown cable with the green cable. Disconnect the earth cable, as the new ball valve does not require an earth connection.

Switch the unit back on and check that the ball valve operates correctly. If the ball valve operates in the opposite direction, refer to Option B.

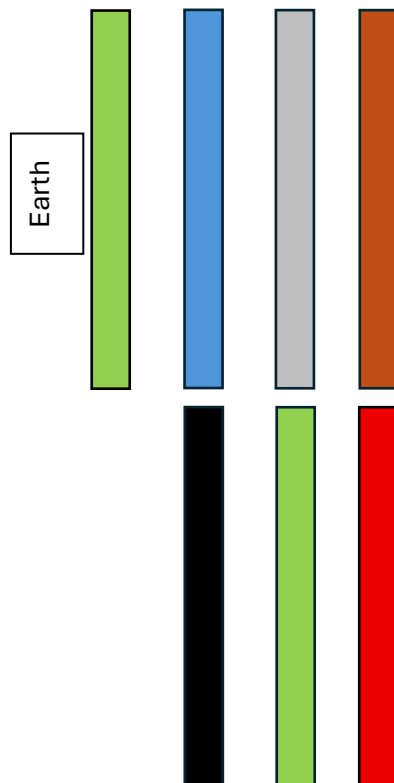

Option B

With the unit switched off and isolated from the power supply, swap the blue cable with the black cable, the grey cable with the green cable, and the brown cable with the red cable. Disconnect the earth cable, as the new ball valve does not require an earth connection.

Once all connections are secure, switch the unit back on and check that the ball valve operates correctly.